

FUNSPORT MAIN SEAL INSTALLATION PROCEDURE

1. Remove original seal from sunroof and clean frame with adhesive remover to remove old butyl.
2. Apply butyl sealant tape to main frame flange (Figure 2). Overlap the joint.
3. Position seal vulcanized joint between handle base lugs (figure 1).
4. Push seal down into butyl tape so that heel enters groove A (figure 2).
5. Work remainder of seal into groove to both left and right. Be certain to finish seal insertion at a point between the hinges (figure 1). *Do Not end insertion at corner, as seal may appear to grow or shrink, which can provide a leak path at corner.*
6. Use roller or glazing stick to work top leg of seal into recess B (figure 3).

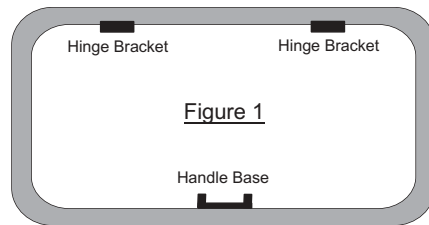


Figure 1

Figure 2


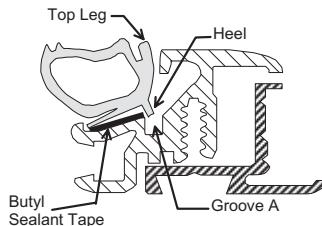


Figure 3

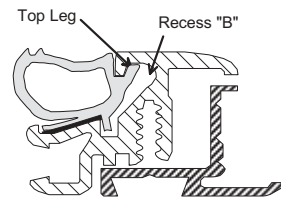

F1530-005 · F1432-005 · F1732-005 · F1934-005

Kit Contents: Sunroof Main Seal, Butyl Sealant Tape, Instructions

Suggested Tools: Glazing Stick or Window Screen Roller