

INSTALL INSTRUCTIONS: SIQ-312 Fog Light Kit 2012 SCION iQ

Preparation

Remove negative battery cable


Vehicle Disassembly

1. Remove fender liner
2. Remove existing fog light covers
3. Locate the existing fog light harness, and connect to fog light (picture 1)



Picture 1

4. From behind, install fog lamp into bumper and secure with supplied screws (picture 2)

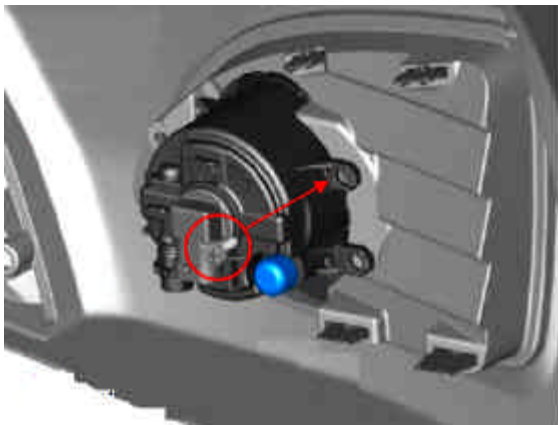

Picture 2


5. Snap on the both fog light bezel
6. Reinstall fender liners

RELAY INSTALLATION

7. Look up under instrument panel from left (pictures 3 ~ 4)



Picture 3

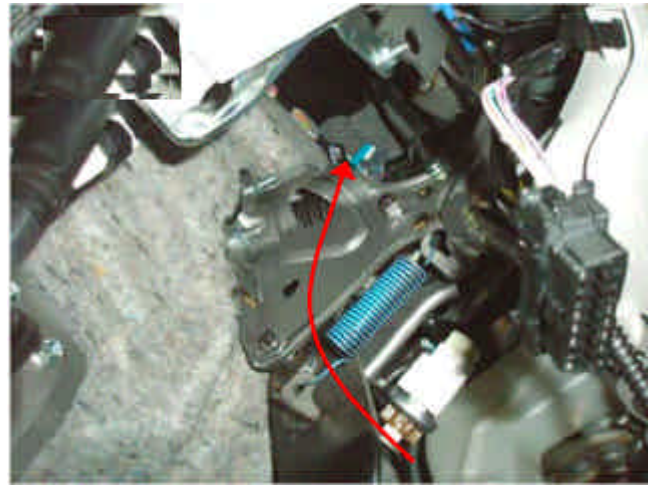

Picture 4

8. Locate the gray receptacle. Plug relay into top of this receptacle (light blue object, picture 5)



Picture 5

9. Reinstall all panels

INSTALL INSTRUCTIONS: SIQ-312 Fog Light Kit 2012 SCION iQ

SWITCH INSTALLATION

10. Detach center console cover
11. Locate the existing factory wire harness
12. Connect the switch wire harness adapter and then connect switch (picture 6)



Picture 6



Picture 7

13. Reinstall center console panels
14. Reconnect negative cable of battery to the negative terminal of battery. Torque to 48 in-lbs

DONMAR
SUNROOFS & ACCESSORIES

<http://www.donmar.com>