


# OE Fit Fog Light Kit Instructions: TTA-312 2012 Toyota Tacoma

1. Remove negative battery terminal
2. Attach the ring terminal with 2 black wires to body ground
3. Connect the red wire from the relay to *ignition switched* +12V power source under the hood
4. Run wire harness through firewall to cabin
5. Run the fog light wire harness on the driver side of the car. Use wire ties as needed.
6. Remove dash panels below steering wheel
7. Mount switch into dash knockout position to left of steering column
8. Install **DIODE** inline on **orange/black** wire (white stripe points toward open end of wire)
9. T-tap **orange/black** wire from fog light harness to connector IA-1 pin 29, white wire. Connector IA-1 is located in the upper kick panel area (pictures 1 and 2)
10. T-Tap the **green/black** wire from fog light harness to connector IA-1, pin 35, red-black wire (picture 1 and 2)

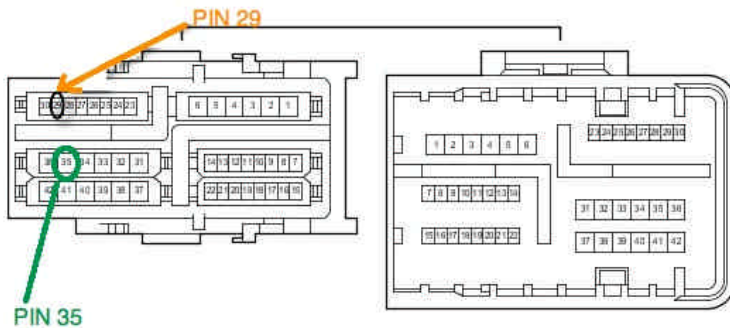

Picture 1



Picture 2

11. Remove lower splash shield and wheel well liners on both sides.
12. Remove the fog light cover knockouts



Picture 3 – fog light cover knockout

13. Install fog lights into existing bezels, securing them with supplied Phillip screws
14. Connect wires to fog lamps and test operation.
15. Reinstall splash shields
16. Reinstall interior panels, secure all wires and reconnect battery
17. Adjust/aim fog lamps



**IMPORTANT NOTE:** This kit is wired for Negative pin trigger on both relays. Orange/Black & Green/Black signal wires should NOT connect to +12V or you may damage the relays and harness.

**DONMAR**  
SUNROOFS & ACCESSORIES

<http://www.donmar.com>