

Category: Sunroof

Document Number: PI011BC

Date Posted: 3/31/2006





Description: **Proper Installation Procedure for 300L Trim Shell**

Overview

Following the steps below for proper installation of a Hollandia 300L series trim shell.

Installation Steps:

1. With the glass panel open, start at the rear aligning and engaging the stansions in the center rear portion of the trim shell to the center lower frame retaining bolts. With the trim shell angled approximately 45°, carefully begin to raise the shell up until the three rear retaining fingers clip into place. (A clicking sound can be heard when they have successfully engaged)
- 2-3. Continue to raise the trim shell up from the angled position until the four side retaining fingers clip into place in the same fashion as the rear clips.
4.
 - To finalize trim shell installation, ensure the front section of the trim shell completely seats up to the motor bracket PRIOR to engaging the pressure clip into place. Refer to figure 2.
 - Once trim shell is properly aligned, carefully engage the pressure clip by applying upward pressure to the trim shell in the localized area until fully seated. This can be determined by looking through the switch cover hole prior to switch installation.
5. Install the front trim shell cover.

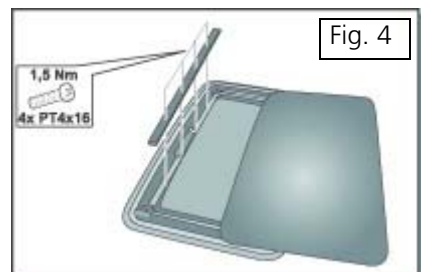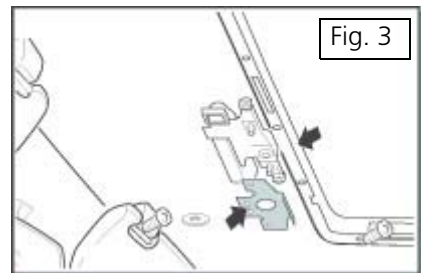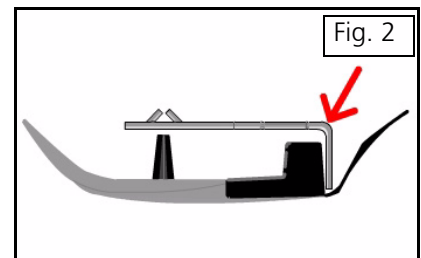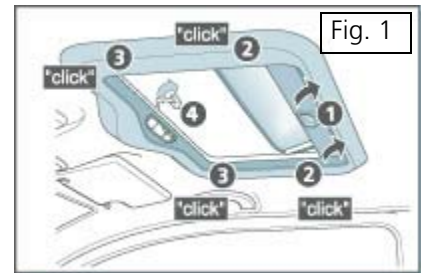

Any questions? Contact our technical support team at (800) 860-7866 or via email at info@webasto-us.com