

# INSTALLATION INSTRUCTIONS


## CamLock Mirror Adapter Kit

### Kit Contents:

- 1 Adapter Bracket
- 1 Replacement Spring
- 1 Spring Tensioner
- 2 Screws

### Tools Required:

- Phillips Screwdriver
- Needle Nose Pliers

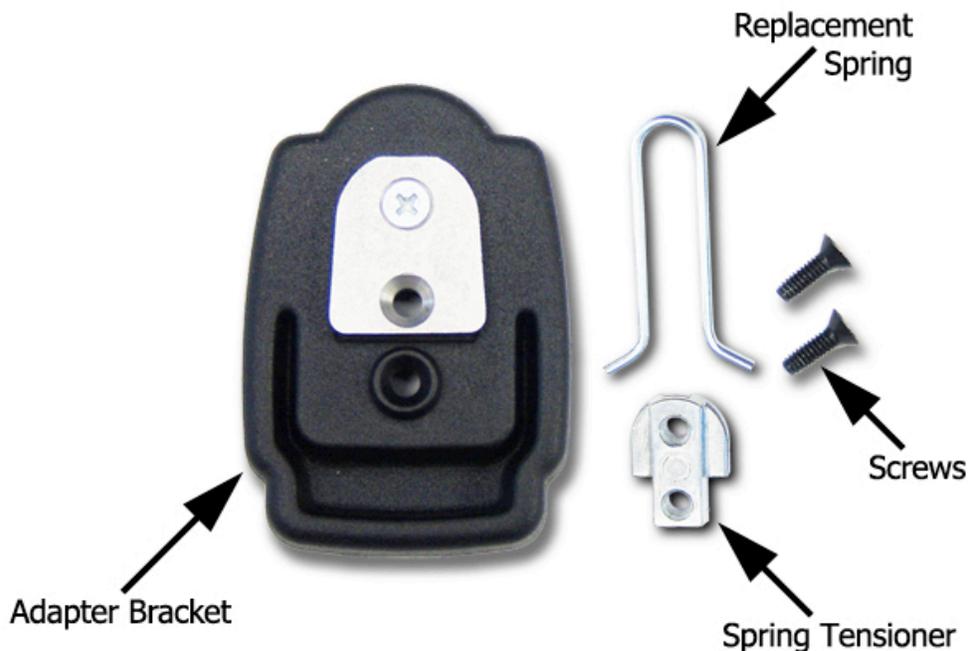

- 1)** Remove the existing mirror by holding base of mirror and turn in a counter clockwise direction until it disengages from the windshield button.
- 2)** Remove the existing spring and replace it with the replacement spring from this kit.
- 3)** With your thumb push the spring tensioner under the spring until it snaps into place.
- 4)** Place bracket adapter over windshield button making sure to line up the holes with the spring tensioner.
- 5)** Start the install of the two screws provided.
- 6)** Hand tighten the center screw, then tighten the lower screw. **Do not torque in excess of 20-inch lbs.**
- 7)** You are now ready to mount you Brandmotion mirror.