


INSTALLATION INSTRUCTIONS: STC-601 Interior Ambient Lighting Accent Kit [2012 SCION tC]

Item #	Quantity Req'd.	Description
1	1	Passenger side LED Strip
2	1	Driver side LED Strip
3	1	Remote Control
4	1	Control Module
5	1	Hardware bag

1. Remove negative battery cable.
2. Remove the left dash panels and driver and passenger console panels
3. Assemble the driver LED accent light. It is the strip with wires coming from both ends (picture 1)

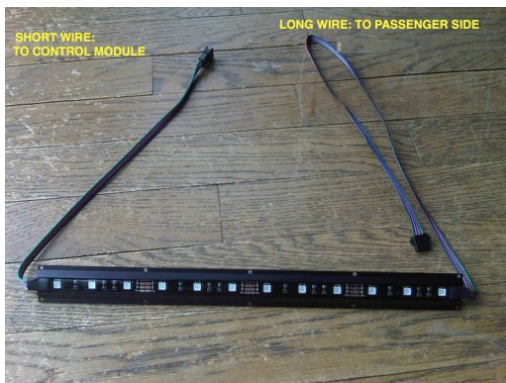


Picture 1


4. Using two silicon mounting brackets, 2 sets of bolts, washers and nuts, secure the stainless steel mounting brackets so the tip of each mounting bracket is facing inward and down when LED is facing up *Note: Do not over-tighten the bolts, since it may damage the silicon mounting bracket* (picture 2~4)



Picture 2

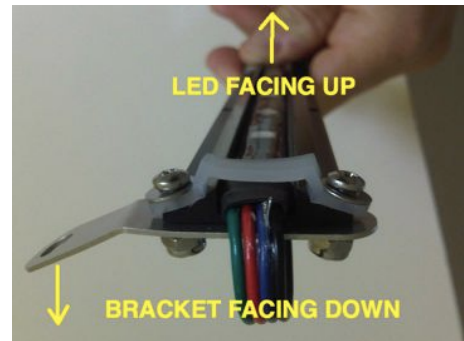


Picture 3

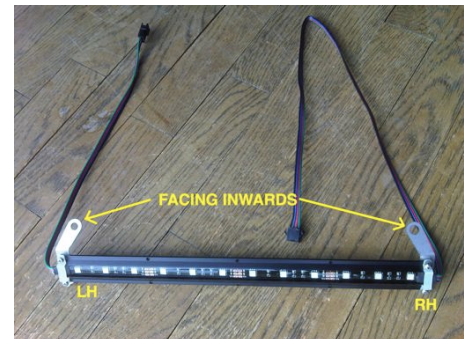

Picture 4


5. Secure the driver side LED accent light to the factory bolts as shown on picture 5 and torque to 7ft-lb

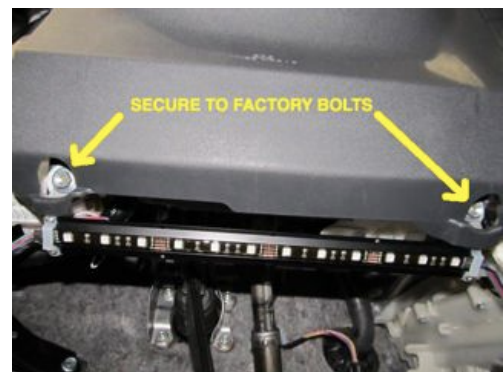

Picture 5

6. Connect the control box wire harness to the driver side LED accent light.
7. T-Tap the red wire of the power cable of the control box to connector C25 pin 8, gray wire on the power mirror switch (picture 6 and 7)

INSTALLATION INSTRUCTIONS: STC-601 Interior Ambient Lighting Accent Kit [2012 SCION tC]

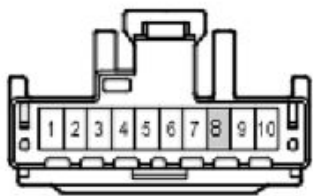

Dimmer

Light Color



ON/OFF

- Illumination Patterns
- Flash
 - Strobe
 - Fade
 - Smooth

