

WARRANTY (LIMITED NON-TRANSFERABLE)

SH-B-03

- ▶ PACIFIC RESTYLING SEAT HEATERS ARE WARRANTED TO BE FREE OF DEFECTS IN MATERIALS AND WORKMANSHIP FOR A TERM OF **3 YEARS** OR **60,000 KMS** (36,000 MI), WHICHEVER OCCURS FIRST. IT IS EXTENDED TO THE "ORIGINAL-END USER" OF THE VEHICLE AND IS **NOT TRANSFERABLE**.

THE FOLLOWING VOIDS THIS WARRANTY:

1. If the "Installation Guidelines", "Pad Alteration - Procedure", and "User Safety Instructions" of this handbook are not followed completely and accurately.
2. Any unauthorized repair made to the seat heater.


WARRANTY LIMITATIONS:

1. Replacement Parts are covered for six months or the remainder of the original warranty period - whichever is longer.
2. In case of burns on seat cover and foam, only the parts are covered and not the labor.
3. Damage to product in transit is not covered. This claim must be filed with courier.

DONMAR
SUNROOFS & ACCESSORIES

BOLSTER HEATING PADS

INSTALLATION GUIDE
& OWNER'S MANUAL

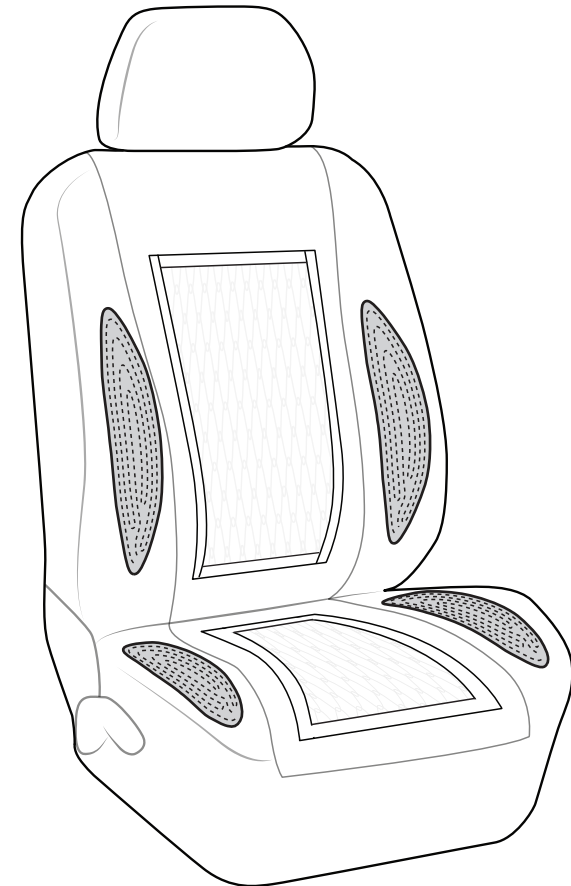

IMPORTANT

Please register your product within 30 days after installation or you **MUST** retain the proof of purchase to claim warranty. Please follow guidelines on the last page to register your product.


IMPORTANT

Please register your product within 30 days after installation or you **MUST** retain the proof of purchase to claim warranty. Please follow guidelines on the last page to register your product.

1 WIRE CONNECTION

FUSE ADVISORY :

When using 4 bolster pads together with the 2 seat heater pads (6 pads in use together) change the 10A fuse over to a 15A fuse.

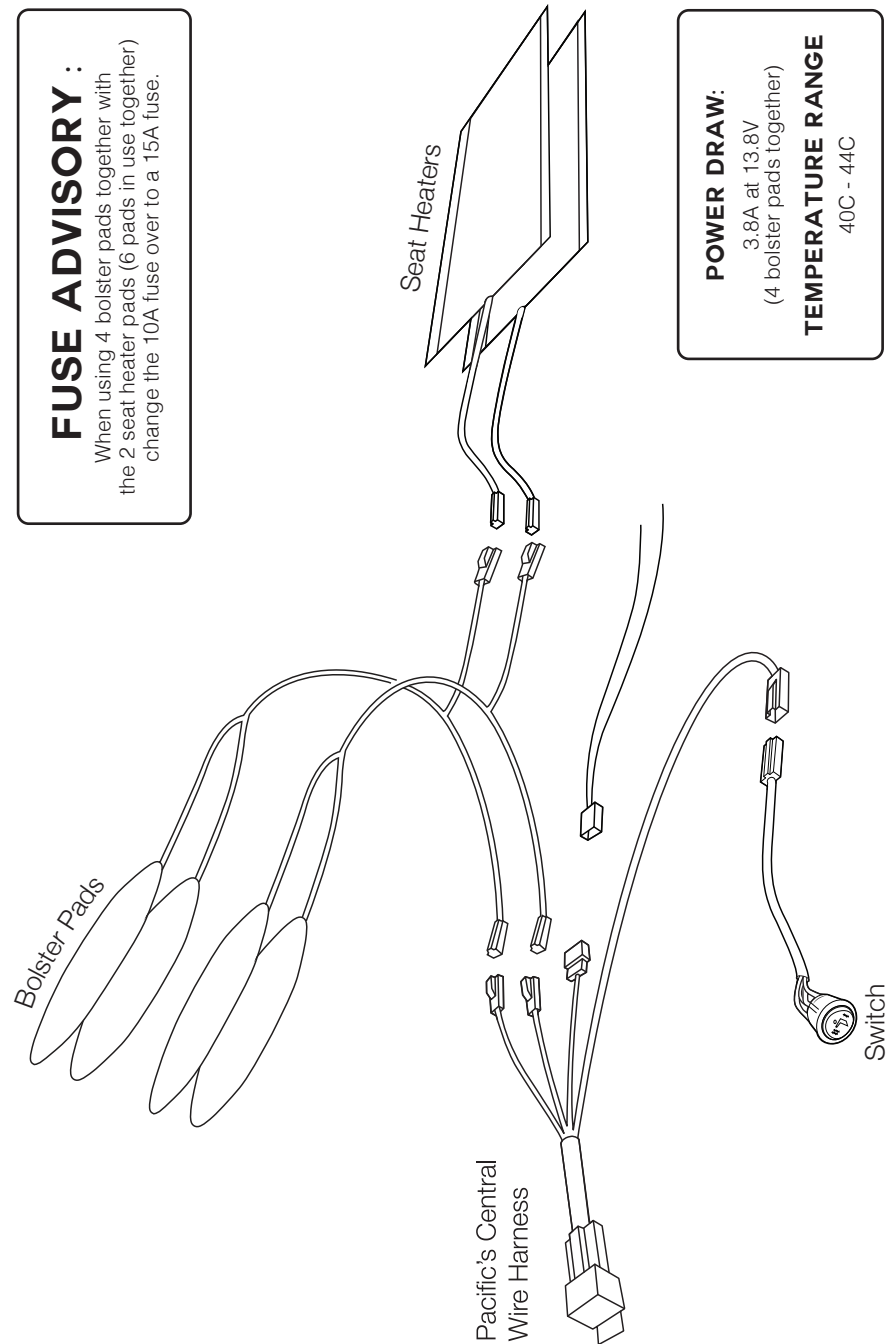

POWER DRAW:

3.8A at 13.8V
(4 bolster pads together)


TEMPERATURE RANGE

40C - 44C


2 INSTALLATION PROCEDURE

CAUTIONS : Install bolster pads or any other heat pads only under the seat covers in good condition; ie. no rips, tears, holes, etc. This is to ensure safety of the passenger and performance of the seat heater.

1. Follow the installation procedure to Step-9 in Installation Guide for SH-R-03 (Carbon Fiber-Seat Heater). After the main (Carbon Fiber or Split Pads) heat pads have been adhered to the seat cushion, place the bolster pads on the center of seat bolster and mark around the bolster pads with a pen or marker.

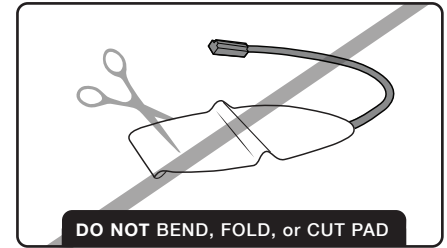

2. Remove adhesive tape from the bottom of the bolster pad and adhere it to the bolster portion of the seat.

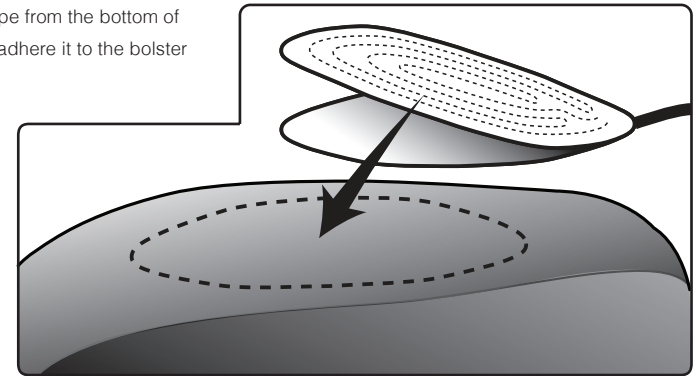

3. Press firmly on the bolster pad to make sure it is attached completely.
4. Follow the connections as shown in "Wire Connection".

NOTICE : **If you are installing bolster pads ONLY, the connections will remain same. Ignore the connection to regular heat pads and secure all loose wires and connectors. Do not cut off the unused connector as it may cause short circuit and will void warranty.**

5. Continue to step 10 in the installation guide for SH-R-03 (Carbon Fiber Seat Heater).

IMPORTANT

Please register your product within 30 days after installation or you MUST retain the proof of purchase to claim warranty. Please follow guidelines on the last page to register your product.